



Digital TV Channel Setup

Welcome to Gulf Waters Beach Front RV Resort!

While we know most of your purpose for visiting was not to be inside watching TV, we want to help in case you have any issues getting working on our resort digital cable service.

There are many different TV manufacturers and models out there, and while most of them work with our cable service, they all tend to have different ways to get them setup and to learn channels.

Unless you have a new TV that has never been setup, most of you will only need to have your TV re-learn channels. To do this, we'll provide the most generic steps that work for most TV's. Some buttons and menu items will vary, but in general, the process is the same.

1. First, change your input to either TV, antenna, or cable. Some have one of those options along with the various HDMI input settings.
2. Once on TV, antenna, or cable, go into your TV's menu. Many smart TV's today have this option under a HOME menu. Some will have a Settings button or menu option and some call it Preferences.
3. Regardless, the next area you want is the Channels menu option.
4. Once in the Channels menu option, confirm that it shows you are on Cable, and then select either Channel Scan, Find Channels, or Auto Program. Where you have the option, just scan for Digital channels. While older analog TV's are supported, most TV's today will take advantage of our new digital cable channels.
5. Once the scan is complete, you should have anywhere from 54-58 cable channels and if complete, you can return to the main menu or exit setup.

TROUBLESHOOTING:

If you did not find any channels, the primary reason is usually one of a few things:

1. The RV Antenna Booster switch is powered ON. Make sure your antenna booster is turned OFF. In most RV's, it is a push button and needs to be out, and often has a red light that is not illuminated when turned off. Some antenna booster power switches are like a light switch, and need to be in the down position to be off. And RV's that have Winegard or other automatic powered antennas will have a small black button, usually on the top left of the control panel, with an LED light. Again, just make sure it's OFF.
2. The cable either outside or inside the RV and connected to the TV is either loose, or might be corroded or damaged. If so, we may have a spare coaxial cable that we can loan you.
3. If you still cannot find channels, contact the front office and they can send someone to your site to help you.